

ALL IN ONE PARTY RENTALS AND SALES

CUSTOMER PLEASE NOTE: THIS CANOPY IS LIGHTWEIGHT! ALL IN ONE PARTY RENTALS CANNOT BE RESPONSIBLE FOR INSTALLATION OR WEATHER CONDITIONS CREATING CANOPY INSTABILITY OR DAMAGE! AS A PRECAUTION CANOPY SHOULD NOT BE LEFT UP OVERNIGHT.

Party Canopy Instructions For 16x16 or 20x20

1. Lay out canopy on ground. Use tarp over rough or muddy ground.
2. Extend ropes out from each side pole hole (extend corner ropes in "V" position).
3. Assemble 2 piece sidepole and lay straight out from pole hole along rope.
4. Drive stake approximately 5 feet from edge of tent next to each pole. Attach rope end loosely to stakes.
5. Insert (2 pc) sidepoles into grommets at a 45 degree angle with bottoms slanted inward. (Bottom of sidepole should be slanted in toward center of tent).
6. Assemble 3 or 4 piece centerpole and move in under canopy. Keep at a slight angle.
7. Tighten stake ropes when raising sidepoles to upright positions.
8. Raise center pole to upright position.
9. After set-up check all ropes to make sure canopy is secure!

White 20x20

20 poles (center 4 inserts)

12 stakes

1 top

Yellow/white 16x16 or

Yellow/white 20x20

19 poles (center 3 inserts)

12 stakes

1 top

