

OPERATING INSTRUCTIONS

Controls and Their Functions

POWER SWITCH – Turns the unit ON/OFF.


THERMOMETER – Displays the air temperature inside the cabinet. The unit is factory set to a default temperature level for warming the product—temperature setting is not adjustable.

DISPENSER BUTTONS – The unit has three dispense volume buttons (large, small, and manual). To change the large or small dispense volume settings, have qualified service personnel reference the Master Board Settings, in the Maintenance section.

Yellow Button – LARGE portion (factory set to dispense for 8 seconds).

Red Button – SMALL portion (factory set to dispense for 4 seconds).

Orange Button – MANUAL (free-flow), press button to dispense product.

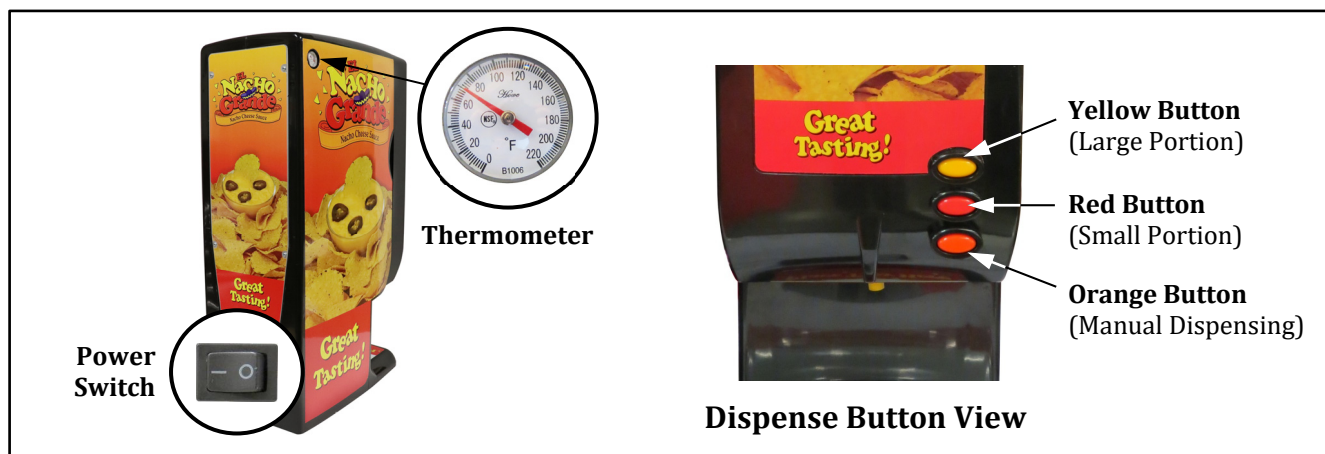

Operating Instructions

1. Turn Power Switch ON.
2. Pre-heat unit with unopened product inside—product starting from room temperature 70–75°F (21–24°C) takes approximately 4 hours to reach 140°F (60°C).

Important: The temperature of the unit is factory set between 140–155°F (60–68°C) (the interior air temperature)—unit temperature setting is not adjustable.

The actual product temperature may be lower or higher than the set temperature depending on how long it has been heated.

For specific product safe food holding temperature, reference your local code and/or instructions from food product manufacturer.

3. Install preheated product (reference Product Installation section), then place a tray in position to receive cheese, and press dispense button for desired amount of product.





Product Installation and Removal

The dispenser is equipped with a Bag Support Tray to hold the bag of cheese in use, and an upper Cheese Bag Tray to hold a bag of cheese for pre-warming.

Add a Basket Liner (PN 100557) to each Bag Support Tray opening to provide cushion/support for a product bag with the small cap. Follow instructions below to install the liner and insert product.

Basket Liner Installation

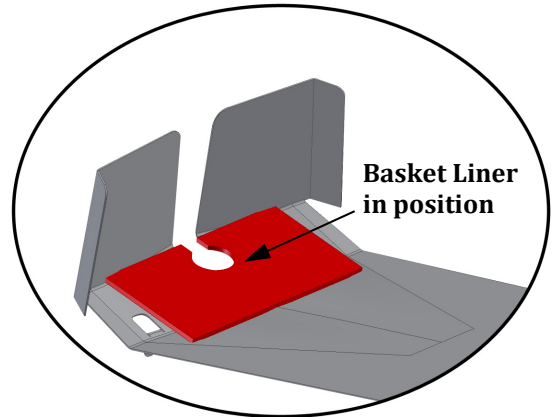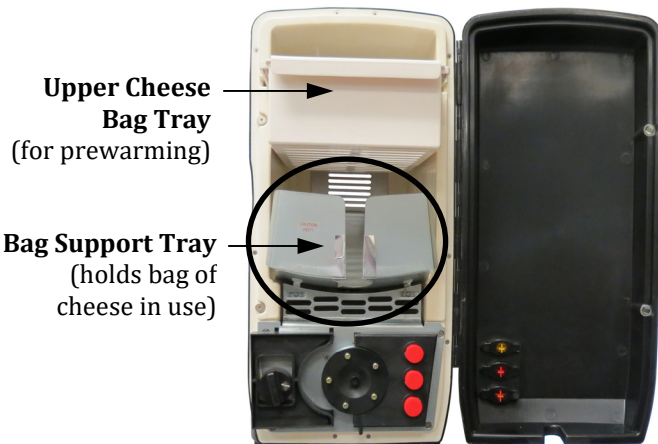


Inside view of Bag Support Tray

Step 1. Open the cabinet door and locate the Bag Support Tray. **Caution:** Tray may be hot when adding or changing the product.

Step 2. Position the Basket Liner in bag support opening as shown.

 
Product Installation



Step 1: Pull ring to remove fitting cover from a preheated product bag. Use a new dispenser tube (PN 5285) for each bag.



Step 2: The dispenser tube will pierce the inner seal of the bag when installed. Make sure the cap is securely threaded onto the bag fitting. **Caution:** Product may be hot.

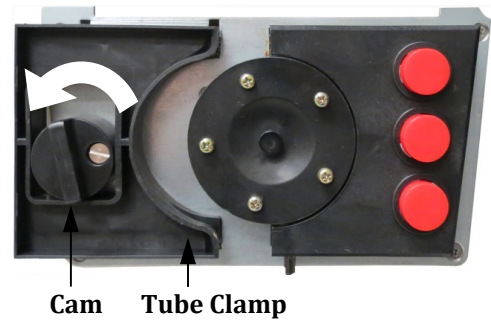


Step 3: Open the front door of the dispenser. Open the tube clamp by turning the cam counterclockwise.




Step 4: Remove the Upper Cheese Bag Tray. Place the product in support tray with spout and tube directed toward the front, and downward through the tray opening.

Basket Liner must be in position (for product bag with a small cap).

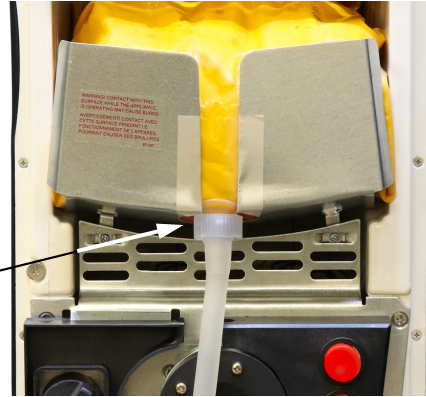

Step 5: Guide the tube through the pump slot from top to bottom.

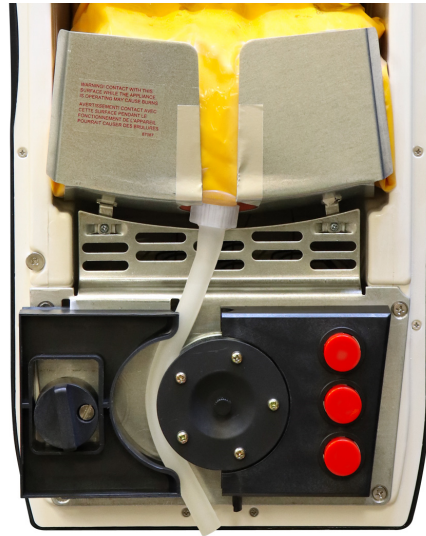

Step 6: Close the tube clamp by turning the cam clockwise. Place the upper bag tray back in the unit and close the dispenser door.

Product Removal:

1. Open the front door of the unit.
2. Open Tube Clamp (see Step 3 of Product Installation).
3. Remove tubing, by pulling from the bottom up.
4. Remove product bag and tube from the cheese dispenser. Reuse the basket liner for the next bag of cheese.

