

# SAFETY PRECAUTIONS

	<p style="text-align: center;"><b>⚠ DANGER</b></p> <p>Machine <b>MUST</b> be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. Do <b>NOT</b> immerse the kettle, warmer, or any other part of this equipment in water. Always unplug the equipment before cleaning or servicing. Do not use excessive water when cleaning.</p>
	<p style="text-align: center;"><b>⚠ WARNING</b></p> <p>To avoid serious burns, do <b>NOT</b> touch the kettle while it is hot.</p>
	<p style="text-align: center;"><b>⚠ WARNING</b></p> <p><b>ALWAYS</b> wear safety glasses when servicing this equipment.</p>
	<p style="text-align: center;"><b>⚠ WARNING</b></p> <p>Any alterations to this equipment will void the warranty and may cause a dangerous situation. <b>NEVER</b> make alterations to the equipment. Make sure all machine switches are in the off position before plugging the equipment into the receptacle.</p>
	<p style="text-align: center;"><b>⚠ CAUTION</b></p> <p>Do <b>NOT</b> allow direct contact with this equipment and the general public when used in food service locations. Only personnel that are trained and familiar with the equipment should operate the equipment. Carefully read all installation instructions before operation.</p>
	<p style="text-align: center;"><b>⚠ CAUTION</b></p> <p>This machine is <b>NOT</b> to be operated by minors. Minors are classified as anyone under the age of 18.</p>

## NOTE

The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.

# POPCORN MACHINES

Add to your party atmosphere with a popcorn machine!

## OPERATIONAL TIPS

### SWITCHES

**Light and Warmer Switch**—turns on heat lamp and optional strip heater under corn pan.

**Kettle Motor Switch**—turns on motor that drives kettle agitator shaft.

**Kettle Heat Switch**—turns on heat element inside kettle.



**NOTE: DO NOT COVER AIR VENT HOLES!** Motor air intake and exhaust holes at top of machine must be clear of any obstruction.

**AVOID SERIOUS BURNS!!! DO NOT TOUCH KETTLE WHILE IT IS HOT!!!!**

### TO POP

1. Turn on kettle heat switch and kettle motor and exhaust switch.
2. “Test pop” with three corn kernels and a little of oil; when kernels pop, place remainder of oil and corn, close lid.
3. When corn has popped, rotate the handle to empty popcorn from kettle; return kettle to upright position.
4. Repeat the cycle; subsequent batches are always more flavorful than the initial batch.
5. Turn off the kettle heat switch on the final batch when the popcorn breaks over the lid of the kettle to eliminate smoke and odor.
6. Turn off kettle heat and kettle motor and exhaust switches.
7. Wipe exterior of kettle with heavy cloth after cooling of kettle to prevent burn or stain of oil drippings.
8. Turn off all switches.

### TO CLEAN

1. Allow kettle to cool until warm enough to handle.
2. Unplug kettle and remove from machine.
3. Wipe kettle, kettle lids, crossbar and exterior clean. **DO NOT IMMERSE KETTLE IN WATER!**
4. Remove popped corn and pack in bags.
5. Remove the “old maid” pan, empty un-popped kernels and wipe clean.
6. Wipe interior of machine clean.
7. Return the machine clean to the rental center to avoid cleaning charges.

**NOTE: POPCORN MACHINE MUST BE IN UP-RIGHT POSITION AT ALL TIMES...  
UPON PICK UP OR RETURN!!! LAYING MACHINE DOWN ON ITS SIDE COULD  
RESULT IN MALFUNCTION AND EXPENSIVE DAMAGE COSTS....**

**VOLTS 120 WATTS 1700 AMP 20**